

FUEL AND OIL

Fuel Tank

The fuel tank capacity is 1.2 gal.

Use of low-lead gasoline with a 91 octane rating or higher is recommended. Do not mix fuel with the oil.

If such gasoline is not available, you may use a leaded regular grade gasoline.


WARNING:

Gasoline is flammable and explosive under certain conditions. Always stop the engine and allow open flames or sparks near the motorcycle when refueling.

Fuel Valve

The fuel valve ① is located on the right side under the fuel tank.

Turning the lever to the vertical position will allow fuel to flow from the fuel tank. This lever should be turned to the horizontal position to shut off the fuel from the tank whenever the engine is stopped.

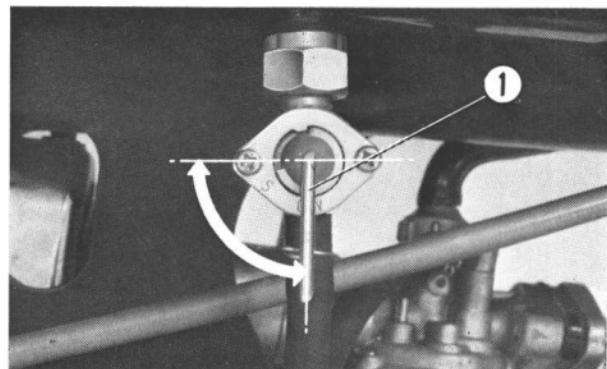

① Fuel valve