


CARRYING TIPS

Do not transport the motorcycle on its side or in a tilted position. However, with use of the special fuel tank cap available as an option, the motorcycle can be transported on its side without fuel spilling; in this case, follow the procedure below.

1. Shut the fuel tank cap valve to the "OFF" position.
2. Shut the fuel valve to the "S" position.
3. Screw out the fuel drain valve ① located on the left side of the carburetor to empty the fuel contained in the carburetor and then close the valve.

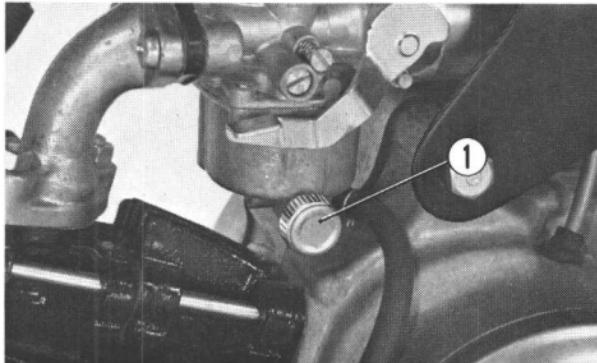

① Fuel drain valve

MAINTENANCE

The maintenance intervals shown in the following schedule are based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.

Items marked * should be serviced by an authorized Honda dealer, unless the owner has proper tools and is mechanically proficient. Other maintenance items are simple to perform and may be serviced by the owner.