

(Ref. No.) Description	Function
(1) Speedometer	Shows riding speed.
(2) Gear range	Shows proper speed range for each gear.
(3) Odometer	Shows accumulated mileage.
(4) Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature.</p> <p>If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 18–19 and do not ride the motorcycle until the problem has been corrected.</p> <p>CAUTION:</p> <p>* Exceeding maximum running temperature may cause serious engine damage.</p>
(5) Turn signal indicator (amber)	Flashes when either turn signal is operated.
(6) High beam indicator (blue)	Lights when the headlight is on high beam.
(7) Neutral indicator (green)	Lights when the transmission is in neutral.
(8) Side stand indicator (amber)	<p>Lights when the side stand is put down.</p> <p>Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 36) is activated.</p>
(9) Tripmeter	Shows mileage per trip.
(10) Tripmeter reset knob	Resets tripmeter to zero (0) . Turn knob in direction shown.