

## Fuel Tank

The fuel tank capacity including the reserve supply is:

9.3 l (2.46 US gal, 2.05 Imp gal)

To open the fuel fill cap (1) insert the ignition key (2) and turn the key clockwise until it stops and rotate the fuel fill cap counterclockwise until it clicks. Lift off the fuel fill cap.

After refueling, to close the fuel fill cap, align the tabs of the fuel fill cap to the slots of the filler neck with the arrow (3) mark on the cap pointing towards the rear of the motorcycle.


Turn the fuel fill cap clockwise until it clicks. The arrow should be pointing towards the front.

Turn the key counterclockwise until it stops and remove the key.

Use unleaded petrol with a research octane number of 91 or higher.

### CAUTION:

\* If "spark knock" or "pinking" occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda's Limited Warranty.

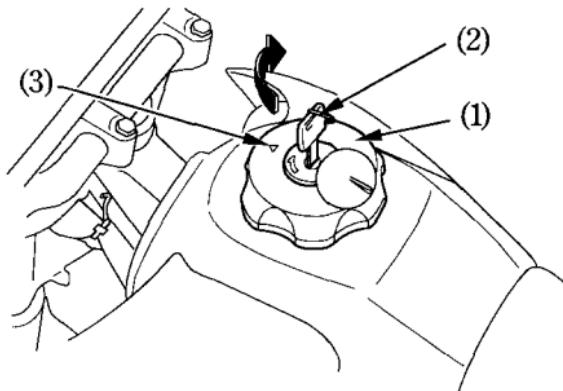

(1) Fuel fill cap  
(2) Ignition key

(3) Arrow