

WHEEL REMOVAL


(Refer to the maintenance precautions on page 51).

NOTE:

* This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your authorized Honda dealer for this service.

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the speedometer cable set screw (1) and disconnect the speedometer cable (2).

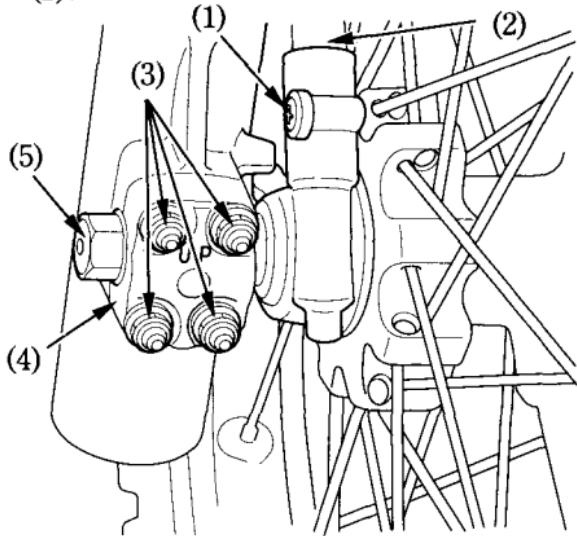

(1) Screw
(2) Speedometer cable
(3) Axle holder nuts

(4) Axle holder
(5) Axle