



Headlight Bulb

1. Remove the front visor (1) by removing four screws (2).
2. Pull off the socket (3) without turning.

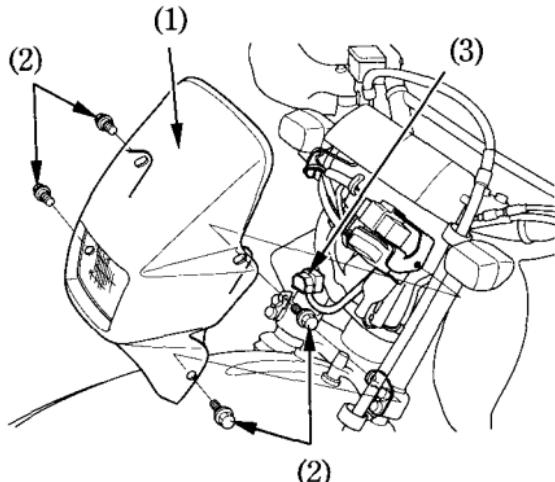

- (1) Front visor
- (2) Bolts
- (3) Socket

3. Remove the seat rubber (4).
4. Remove the bulb (5) while pressing down on the pin (6).
5. Install a new bulb in the reverse order of removal.

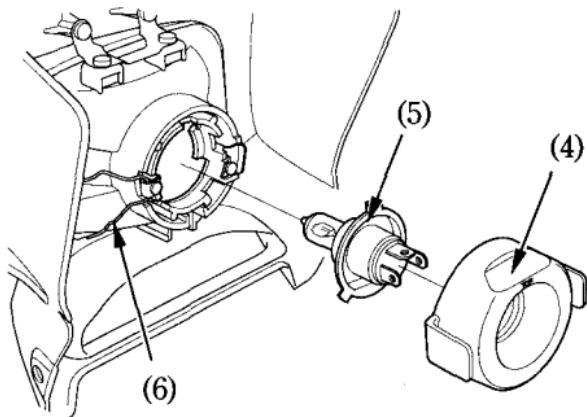

- (4) Seat rubber
- (5) Bulb
- (6) Pin