


## MAINTENANCE

### REVERSE LOCK MECHANISM

Check the reverse selector cable and lever for a loose connection, excessive play, or damage. Replace or repair if necessary.

Measure the reverse selector lever free play at the lever end of the cable side.

**FREE PLAY: 2–4 mm (5/64–5/32 in)**

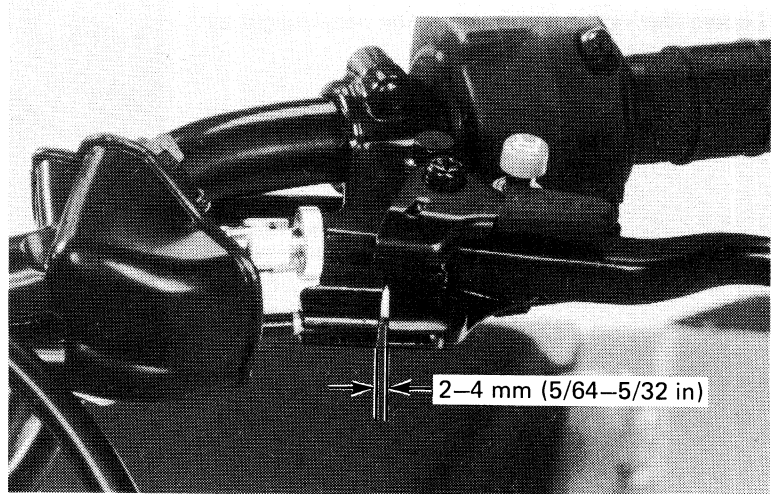


Adjust by loosening the lock nut and turning the adjusting nut. Tighten the lock nut securely.

### NUTS, BOLTS, FASTENERS

Tighten all bolts, nuts and fasteners at regular intervals shown in the Maintenance Schedule (Pages 3-2, 3-3).

Check that all chassis nuts and bolts are tightened to their correct torque values (Page 1-5). Check that all cotter pins and safety clips are in place.

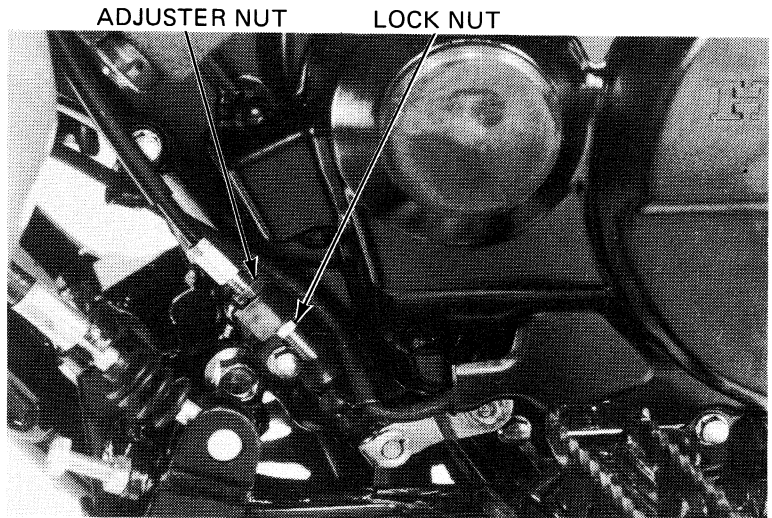

### LIGHTING EQUIPMENT

Turn the ignition switch ON. Check the headlight and taillight by operating the lighting switch and dimmer switch.

Position	Function
OFF	Headlight and taillight are OFF.
ON	LO Headlight low beam and taillight should be ON.
	HI Headlight high beam and taillight should be ON.

If a light does not work properly, check the bulb. Refer to page 17-5 to test the switch if necessary.

