

Tachometer

NOTICE


Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Clock (12-hour display)

To set the clock: [P.25](#)

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:
approximately 0.74 US gal (2.8 liters)

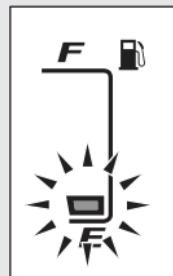

If the fuel gauge indicator flash sequentially or turned off: [P.93](#)