

4 Activating/deactivating of tripmeter A, average fuel mileage, fuel consumption, average speed and elapsed time automatic reset mode:

You can activate or deactivate the automatic reset mode by refueling after the 1st (E) segment of the fuel gauge starts flashing. Initial setting is activation.

- 1 Press **[SEL]** button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.



- 2 Press **[SET]** button. The activation/deactivation of automatic reset mode is set, and then the display moves to the changing of speed and mileage unit.

5 Changing of speed and mileage unit:

- 1 Press the **[SEL]** button to select either "mph" and "mile" or "km/h" and "km".



- 2 When the "km/h" for speed and "km" for mileage are selected

Press the **[SET]** button. The speed and mileage unit is set, and then the display moves to the changing of fuel mileage meter unit.

When the "mph" for speed and "mile" for mileage are selected

Press **[SET]** button. The speed and mileage unit is set, and then the display moves to the ordinary display.