

Maintenance Schedule

Maintenance

Items	Frequency *1									Regular Replace	Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Fuel Line					I		I		I		—
Throttle Operation					I		I		I		99
Air Cleaner *2					R				R		84
Crankcase Breather *3				C	C	C	C	C	C		100
Spark Plug							R				—
Valve Clearance							I				—
Engine Oil				R		R	R		R	1 Year	80
Engine Oil Filter				R			R				80
Engine Idle Speed					I		I		I		—
Radiator Coolant *5					I		I		I	3 Years	86
Cooling System					I		I		I		—
Secondary Air Supply System							I				—
Evaporative Emission Control System *4							I				—

Maintenance Level

: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (☞ P. 146).

: Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

: Inspect (clean, adjust, lubricate, or replace, if necessary)

: Lubricate

: Replace

: Clean