


Battery

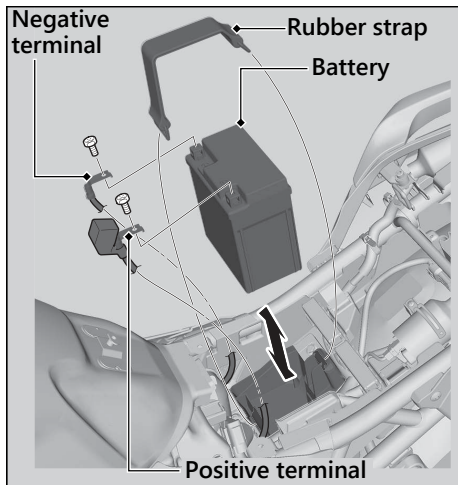

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the seat. ➤ P. 78
2. Unhook the rubber strap from rear side.
3. Disconnect the negative $\ominus$ terminal from the battery.
4. Disconnect the positive $\oplus$ terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal.

Always connect the positive $\oplus$ terminal first. Make sure that bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. ➤ P. 31

For proper handling of the battery, see

"Maintenance Fundamentals." ➤ P. 66

"Battery Goes Dead." ➤ P. 122