



7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install the new oil filter and tighten.

Torque: 19 lbf·ft (26 N·m, 2.7 kgf·m)

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 22 lbf·ft (30 N·m, 3.1 kgf·m)

10. Fill the crankcase with the recommended oil (☞ P. 69, ☞ P. 153) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

2.7 US qt (2.6 L)

When changing oil only:

2.5 US qt (2.4 L)

11. Check the oil level. ☞ P. 80
12. Check that there are no oil leaks.