

Equipment

Owner's Manual	55, 129
Tool Kit.....	55

F

Flooded Engine	51
-----------------------------	----

Front Suspension	103
-------------------------------	-----

Fuel

Average Fuel Mileage Meter	22
Consumption Meter	23
Current Fuel Mileage Meter	22
Gauge	20
Recommended	53
Remaining.....	20
Reserve Fuel Consumption.....	24
Tank Capacity	53

Fuses	68, 125
--------------------	---------

G

Gasohol	145
----------------------	-----

Gasoline	53
-----------------------	----

Gear Position Indicator	20
--------------------------------------	----

H

Hazard Switch	48
----------------------------	----

Headlight Aim	101
----------------------------	-----

Headlight Dimmer Switch	48
--------------------------------------	----

Helmet Holder	54
----------------------------	----

High Beam Indicator	43
----------------------------------	----

Honda Contacts	149
-----------------------------	-----

Horn Button	48
--------------------------	----

I**Ignition Cut-off System**

Banking Sensor.....	130
---------------------	-----

Side Stand.....	91
-----------------	----

Ignition Key	128
---------------------------	-----

Ignition Switch	49, 51, 129
------------------------------	-------------

Indicators	42
-------------------------	----

Information Record	155
---------------------------------	-----

Instruments	18
--------------------------	----

L

Labels	7
---------------------	---

Load Limits	15
--------------------------	----

Loading Guidelines	15
---------------------------------	----

Low Oil Pressure Indicator	45, 110
---	---------