

Instruments *(Continued)*

Torque Control level [T] indicator P.129

When the indicator flashes, have your dealer check for problems.

[EB] [Engine Brake] level indicator P.137

When the indicator flashes, have your dealer check for problems.

[P] [Power] level indicator P.137

When the indicator flashes, have your dealer check for problems.

G switch [G] indicator P.122

CRF1100D/D4

When the indicator flashes, have your dealer check for problems.

ABS mode [ABS] indicator P.137

When the indicator flashes, have your dealer check for problems.

[S] [Overall] indicator P.137

CRF1100A4/D4

When the indicator flashes, have your dealer check for problems.

