

Instruments *(Continued)*

Silver image display

Clock (12-hour or 24-hour display)

To set the clock: **↶P.86**

Side stand indicator


↶P.63

Riding mode display

↶P.137

NOTICE

You should refuel when the reading approaches the E (1st) segment. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

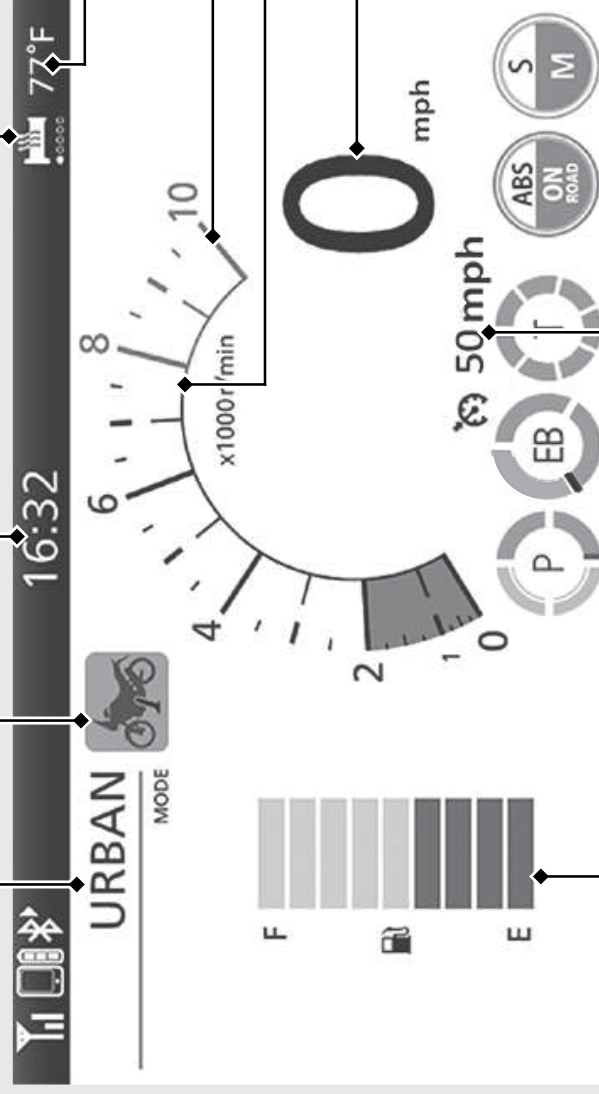

Fuel gauge

Remaining fuel when only E (1st) segment starts flashing:

Approximately 0.95 US gal (3.6 L) **CRF1100A/D**

Approximately 1.03 US gal (3.9 L) **CRF1100A4/D4**

If the fuel gauge indicator flashes: ↶P.297

