

Instruments *(Continued)*

When "---.-" flashes, have your dealer check for problems.

To reset the tripmeter B [TRIP B]:



■ Tripmeter B Average Fuel Mileage [AVG. CONS.]

Displays the average fuel mileage since the tripmeter B was reset.

The average fuel mileage will be calculated based on the value displayed on the selected tripmeter B.

Display range: 0.0 to 299.9 mpg (km/L, L/100 km or mile/L)

- Initial display: "---.-" is displayed.
- More than 299.9 mpg (km/L, L/100 km or mile/L): "299.9" is displayed.