


Instruments (Continued)

- 1 Select [Display Mode], and then press the **ENT** switch.
- 2 Press the **▲** sel up switch or **▼** sel down switch to select a setting menu.
- 3 Push the **◀** or **▶** of the **◀▶** sel left/right switch to select your desired display.

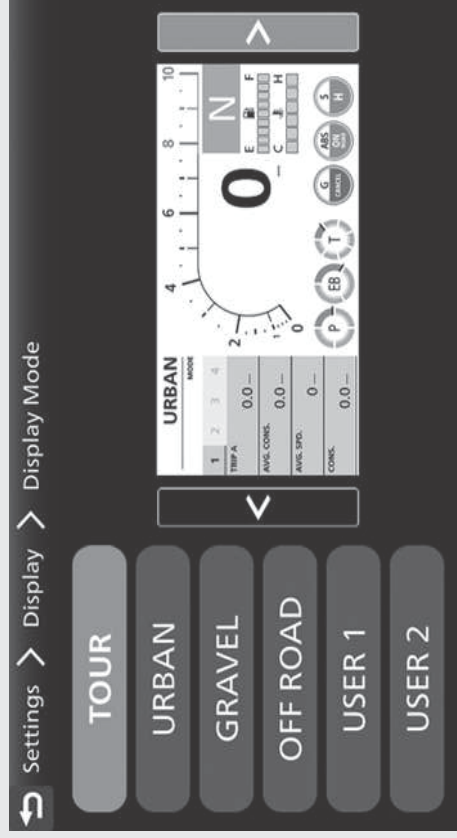

- 4 Return to the riding information, previous screen or Home screen. **↶P.38**

You can also perform the above settings by using the touch screen.

Available settings: Gold image/Silver image/Bronze image

Default:

- [TOUR MODE]: Gold image
- [URBAN MODE]: Silver image
- [GRAVEL MODE]: Silver image
- [OFF ROAD MODE]: Bronze image
- [USER 1 MODE]: Silver image
- [USER 2 MODE]: Bronze image