

- 2 Select the [No] (not restore) or [Yes] (restore) using the  sel up or  sel down switch.
- 3 When the [No] is selected
Press the **ENT** switch.
The set value is maintained, and then the display returns to the [General] menu screen.
- When the [Yes] is selected
Press the **ENT** switch.
The display changes to the confirmation screen.



- 4 Select the [No] (not restore) or [Yes] (restore) using the  sel up or  sel down switch on the confirmation screen.
- 5 When the [No] is selected
Press the **ENT** switch.
The set value is maintained, and then the display returns to the [General] menu screen.
- When the [Yes] is selected
Press the **ENT** switch.
The set value return to default setting, and then the display returns to the [General] menu screen.

