


Instrumentals (Continued)

Maintenance

You can check the next periodic inspection time and next engine oil change.

You can change the setting of the next periodic inspection and next engine oil change.

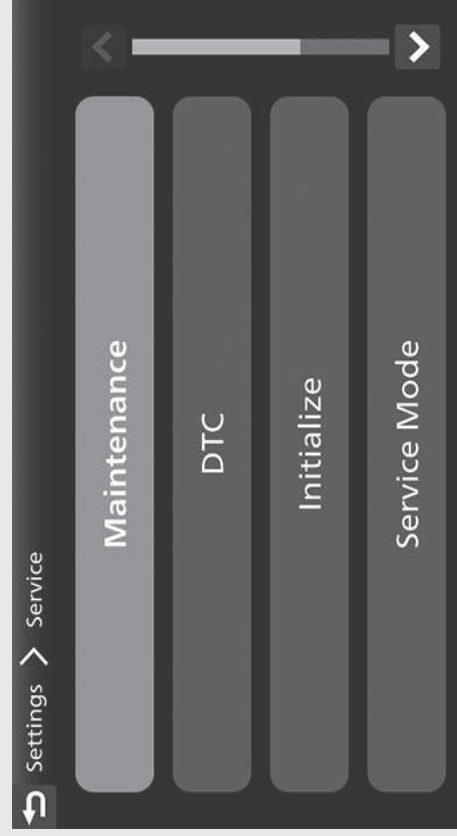

- 1 Select [Maintenance], and then press the **ENT** switch.
- 2 Press the **▲** sel up switch or **▼** sel down switch to select a setting menu, and then press the **ENT** switch.



- 3 Press **◀** or **▶** of the **◀ ▶** sel left/right switch to select a distance, month or year section.