


Switches

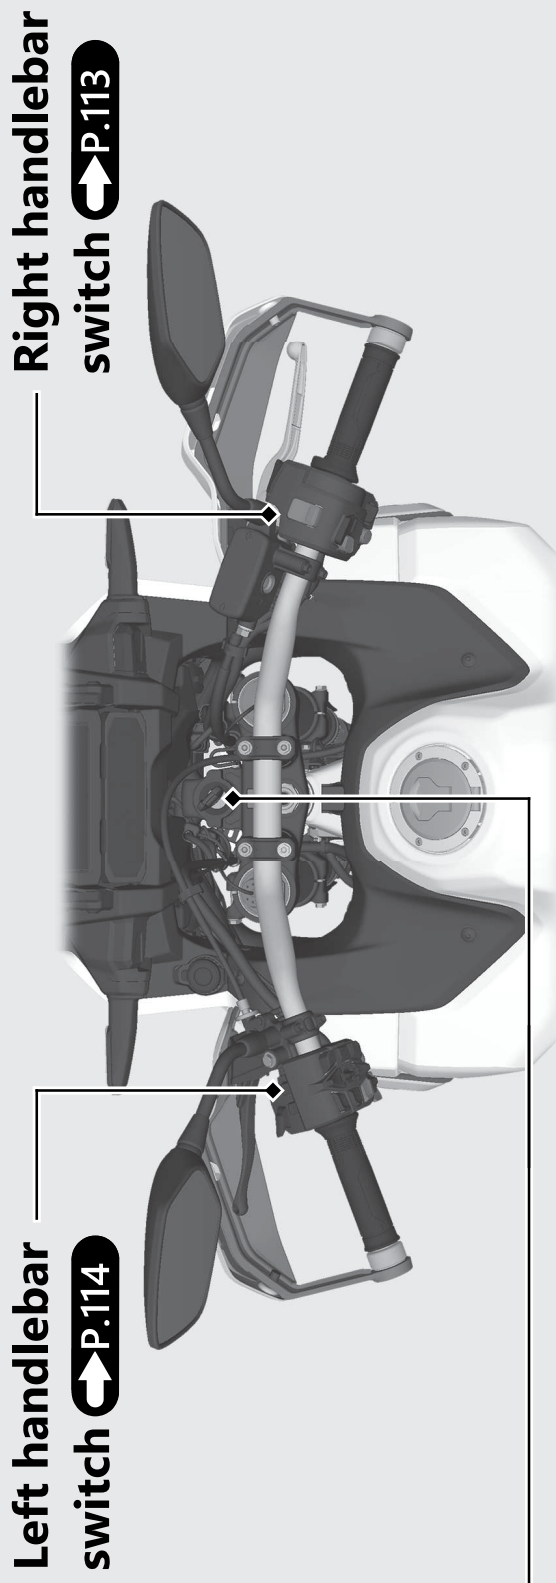

Ignition switch

Switches the electrical system on/off, locks the steering.

- Key can be removed when in the OFF or LOCK position.

Steering Lock: >P.117

ON

Turns electrical system on for starting/riding.

OFF

Turns engine off.

LOCK

Locks steering.

