

- 7 Press the  back switch.

You can also perform the above settings by using the touch screen.

Torque Control on and off

- 1 Stop the vehicle.
- 2 Select the gold image display.  **P.77**
- 3 Select page 4.  **P.43**
- 4 Press the **[ENT]** switch.
- 5 Select [HSTC].
- 6 Press and hold  on the  sel left/right switch to set the [0] (off).
Press and hold  on the  sel left/right switch to set to level of before turning [0] (off) the Torque Control.



- 7 Press the  back switch.
You can also perform the above settings by using the touch screen.

Setting range: Level 1 to 7 or 0 (Off)