
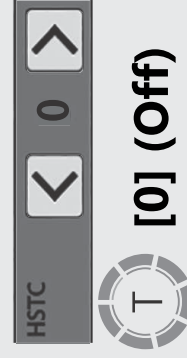
 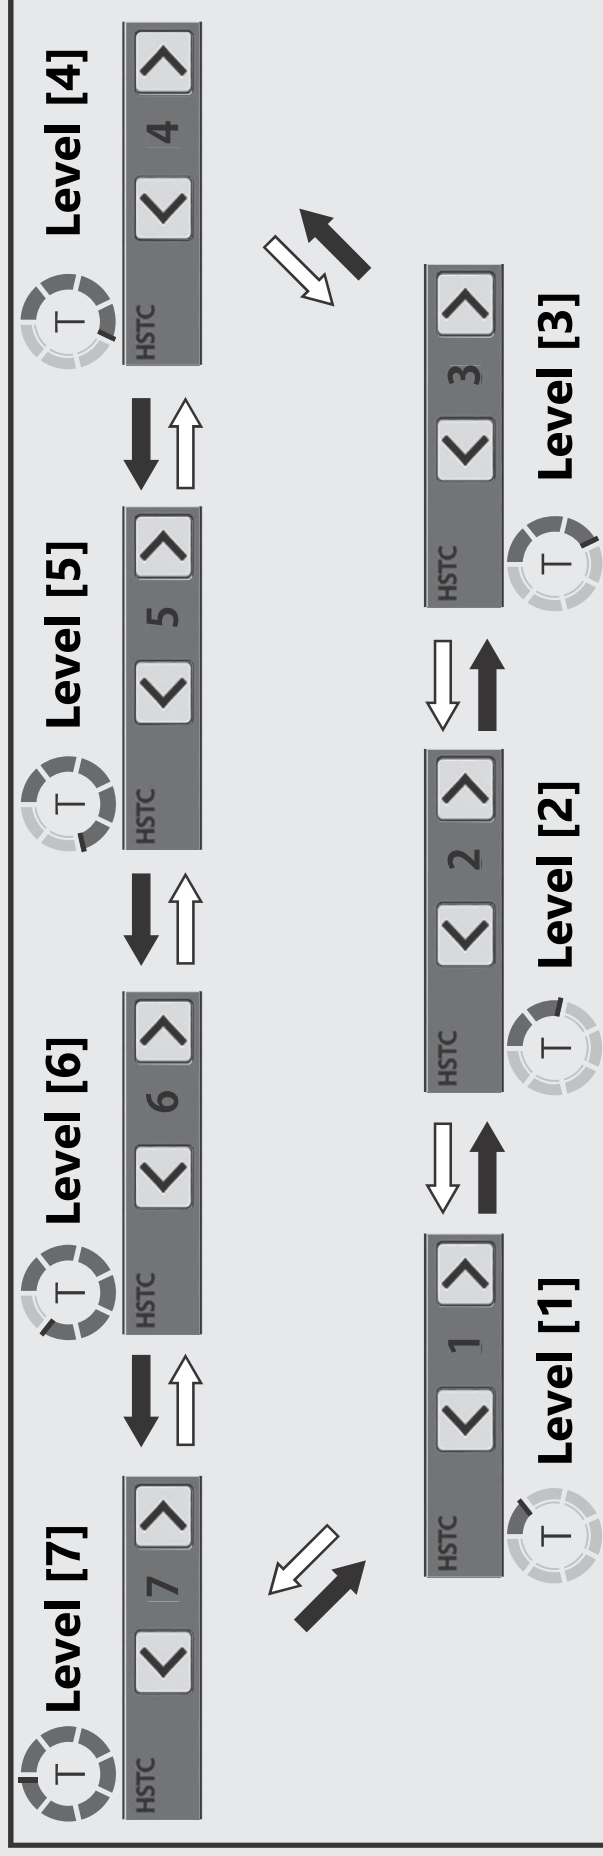
 
 


Honda selectable torque control *(Continued)*



- Push  on the  sel left/right switch
- Push  on the  sel left/right switch or
press the  favorite switch
-  Push and hold  on the  sel left/right switch
-  Push and hold  on the  sel left/right switch