

Audio System *(Continued)*

Operating Apple CarPlay with Siri

To activate Siri, pairing with device such as a headset (for rider) must be paired. **▶P.159**

To Activate Siri

- 1 Start Apple CarPlay. **▶P.189**
- 2 Unlock your iPhone and enable Siri.
 - ▶ For details, refer to the iPhone User Guide, etc.
- 3 Push forward the  voice control switch on the left handlebar.