

# Cornering Light


CRF1100A4/D4

The cornering light lights up the direction of travel of the vehicle when cornering.


## Operating conditions:

- Vehicle has been ridden at a speed of over 6 mph (10 km/h).
  - When the vehicle banking left or right.
- Three-step lighting state is switched by the bank angle.

## Cornering light adjusting screw location

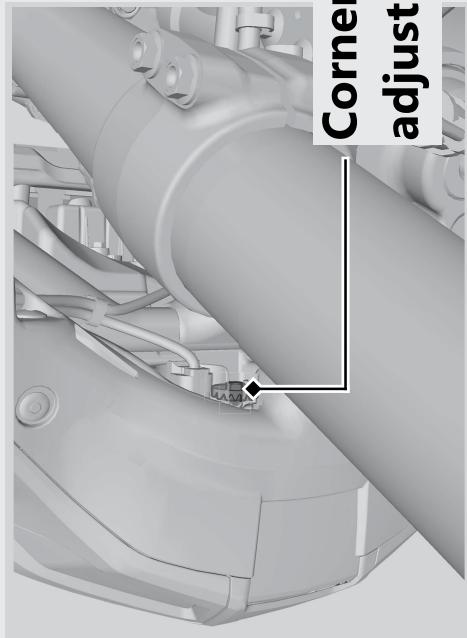

**Cornering light  
adjusting screw**

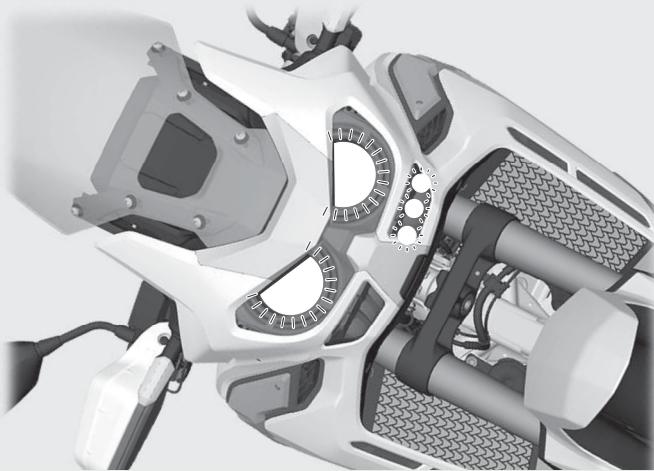

**Cornering light**

