


Battery

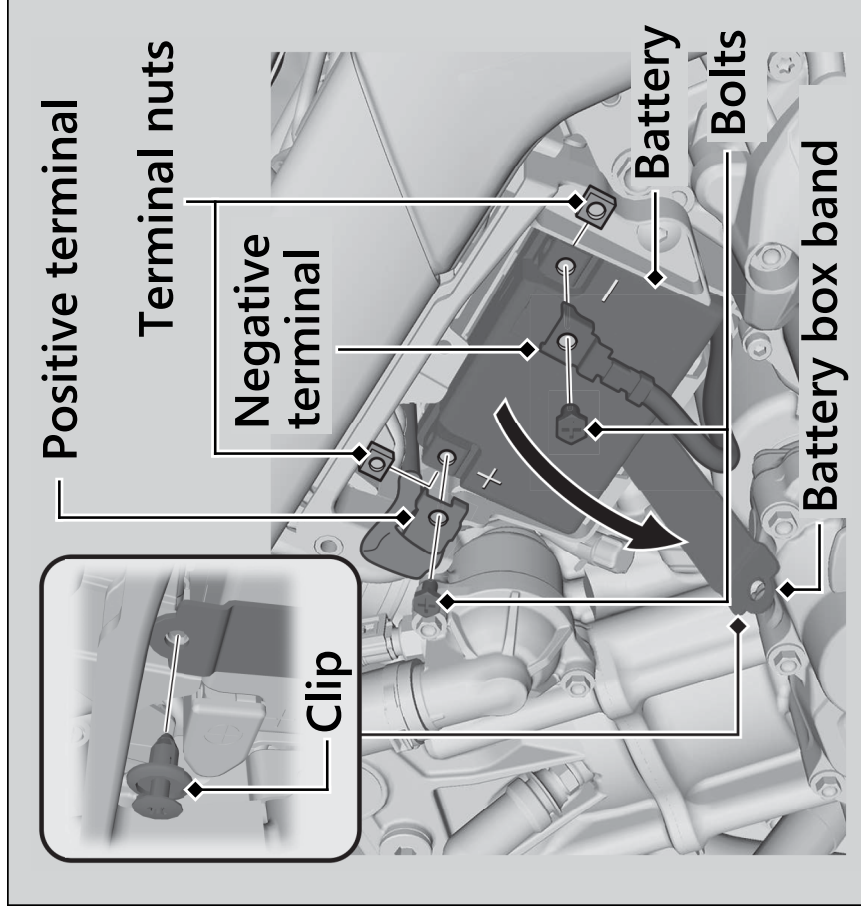

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the tool box. ➔ P. 257
2. Disconnect the negative $\ominus$ terminal from the battery.
3. Disconnect the positive $\oplus$ terminal from the battery.
4. Remove the clip. ➔ P. 250
5. Open the battery box band.
6. Remove the battery from the battery case taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive $\oplus$ terminal first.
Make sure that bolts and nuts are tight.
Make sure the clock information is correct after the battery is reconnected. ➔ P. 86

For proper handling of the battery, see "Maintenance Fundamentals." ➔ P. 235
"Battery Goes Dead." ➔ P. 314