


**3.** Remove the spark arrester mounting bolts, spark arresters and gaskets from the muffler.

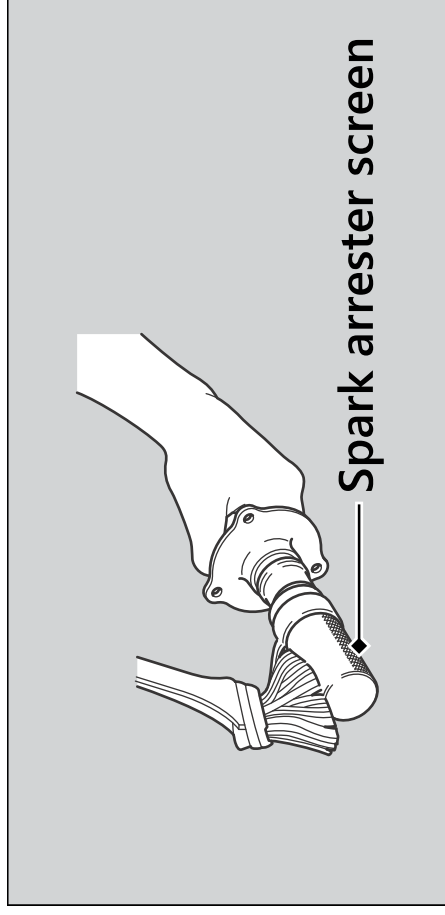

**5.** Install the gaskets and the spark arresters, and tighten the spark arrester mounting bolts.

**Torque:** 6.6 lbf·ft (9.0 N·m, 0.9 kgf·m)

**6.** Install the tail cap and tighten the bolts.

**Torque:** 6.6 lbf·ft (9.0 N·m, 0.9 kgf·m)

**4.** Use a brush to remove carbon deposits from the spark arrester screen. Be careful to avoid damaging the spark arrester screen. The spark arrester must be free of breaks and holes. Replace, if necessary. Check the gasket. Replace, if necessary.