


CRF1100A4/D4

The electrical adjustable suspension allows the preload of the rear suspension to be adjusted in four levels according to riding and load conditions.

The rear suspension spring preload adjustment can be changed only when your vehicle is stopped.

1. Stop the vehicle.
2. Select the gold image display. ➡ P. 77
3. Select page 4. ➡ P. 43
4. Press the **ENT** switch.

5. Select [PRELOAD].
6. Push the ◀ or ▶ of the ◀ ▶ sel left/right switch until the desired value is displayed.

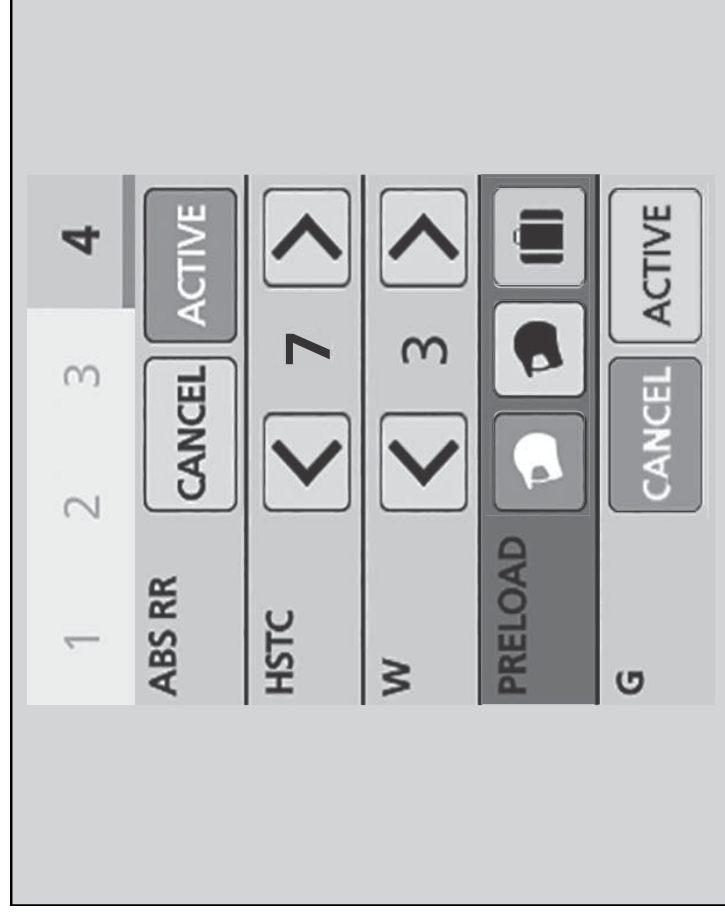

7. Press the ◀ back switch.
You can also perform the above settings by using the touch screen.