

Troubleshooting

Engine Will Not Start.....	P. 291
Overheating (Segment H flashes in coolant temperature gauge)	P. 292
Warning Indicators On or Flashing.....	P. 293
Low Oil Pressure Indicator	P. 293
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 293
ABS (Anti-lock Brake System) Indicator	P. 294
Torque Control Indicator.....	P. 295
If the “–” Indicator is Blinking in the Gear Position Window While Riding.....	P. 296
Other Warning Indications	P. 297
Fuel Gauge Failure Indication.....	P. 297
Coolant Temperature Gauge Failure Indication	P. 298
Handle Grip Heater Failure Indication	P. 298
Tire Puncture	P. 299
Audio System Trouble.....	P. 301
Electrical Trouble.....	P. 314
Battery Goes Dead.....	P. 314
Burned-out Light Bulb	P. 314
Blown Fuse.....	P. 315