

# Wheels

---

## Installation

1. Reverse the removal procedure. Make sure the lug (5) on the fork leg is located in the slot (6) in the brake panel.
2. Torque the front axle nut to:  
44 lbf·ft (59 N·m, 6.0 kgf·m)
3. Check front brake adjustment (page 90).

If a torque wrench was not used to install the wheel, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.