
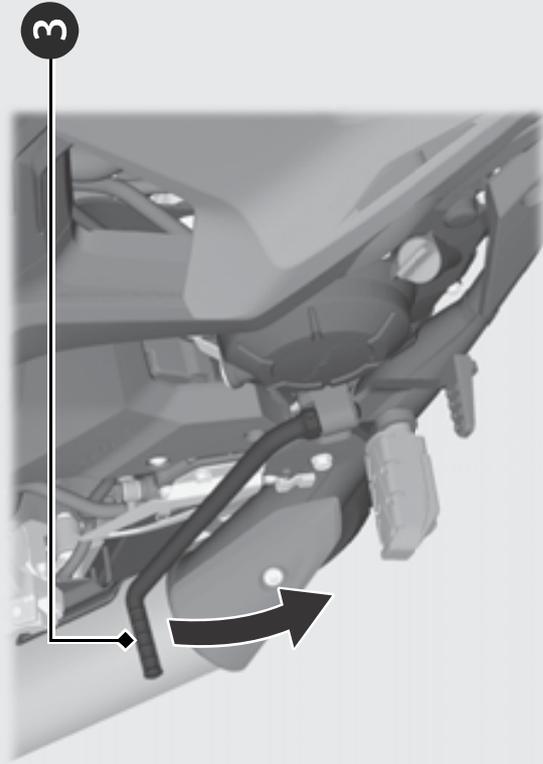


Starting the Engine

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

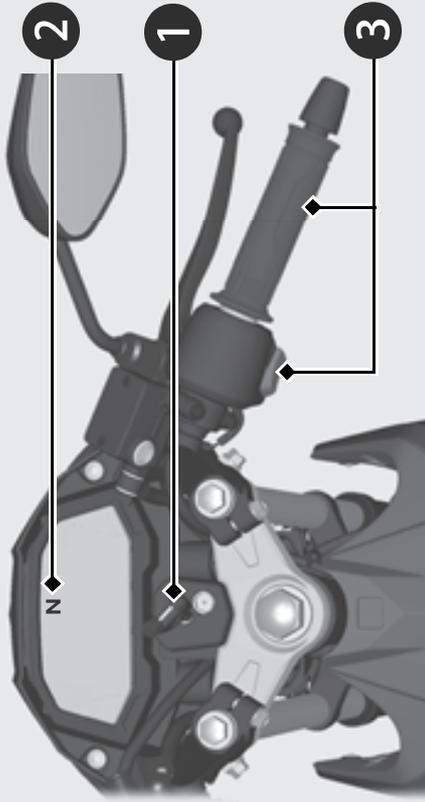

NOTICE

- If the engine does not start within 5 seconds, turn the ignition off and wait 10 seconds before trying to start the engine again to recover battery voltage (Using the start button).
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.

- 1 Turn the ignition switch to the ON position.
- 2 Shift the transmission to Neutral (N indicator comes on).

3 Using the start button

With the throttle closed, press the start button. Release the start button as soon as the engine starts.