

Maintenance Schedule

Maintenance

Items	Pre-ride Check ➡ P. 35	Frequency*1										Annual Check	Regular Replace	Refer to page
		x 1,000 km	1	6	12	18	24	30	36					
		x 1,000 mi	0.6	4	8	12	16	20	24					
Fuel Line 				I	I	I	I	I	I	I	I			–
Fuel Level	I													26
Throttle Operation 	I			I	I	I	I	I	I	I	I			73
Air Cleaner *2 								R						–
Crankcase Breather *3				C	C	C	C	C	C	C	C			74
Spark Plug				I	R	I	R	I	R	R	R			53
Valve Clearance 										I				–
Engine Oil	I		R	R	R	R	R	R	R	R	R			56
Engine Oil Strainer Screen 					C		C		C	C	C			–
Engine Idle Speed 			I	I	I	I	I	I	I	I	I			–
Radiator Coolant *4	I				I		I		I	I	I		3 Years	60
Cooling System 					I					I	I			–

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace if necessary)

C : Clean

L : Lubricate

R : Replace