


Removing & Installing Body Components

Battery

Removal

Make sure the ignition switch is off.

1. Remove the battery maintenance cover.
➡ P. 49
2. Remove the harness band clip from the battery cover. ➡ P. 50
3. Remove the bolt.

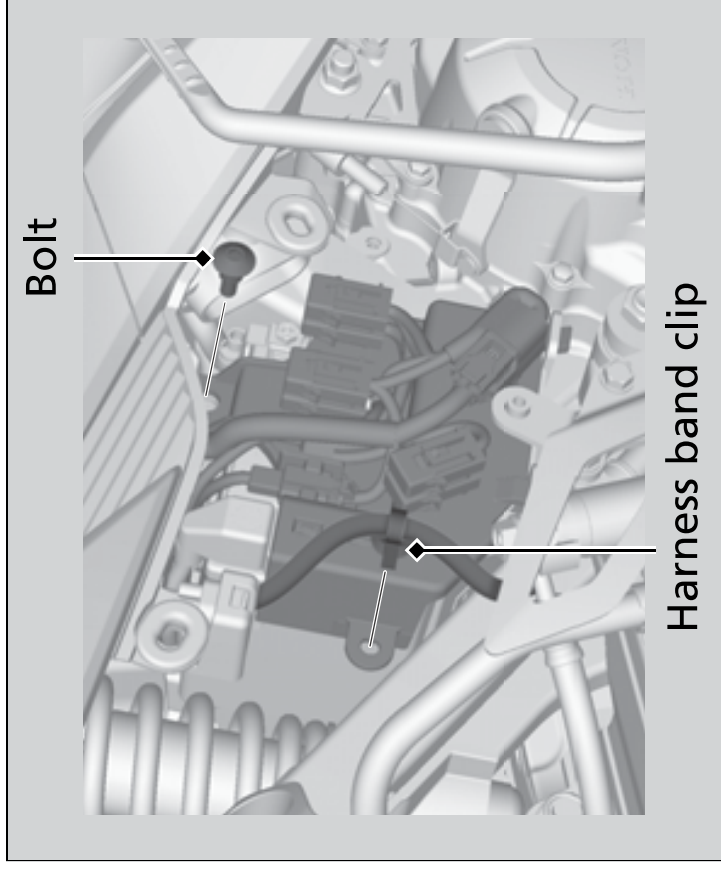

4. Release the tabs, then open the battery cover.

