


Battery Maintenance Cover

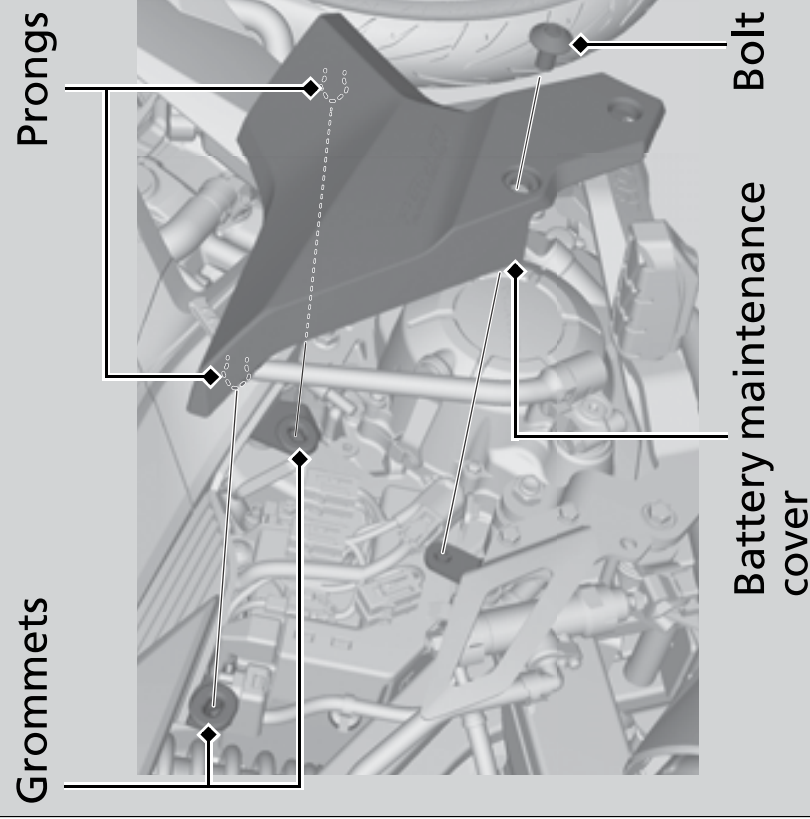

Removal

1. Remove the bolt using the hex wrench stored on the reverse side of the seat.

► P. 46

2. Remove the battery maintenance cover by releasing the prongs from the grommets.

Installation

Install the parts in the reverse order of removal.