


Head Pipe Cover

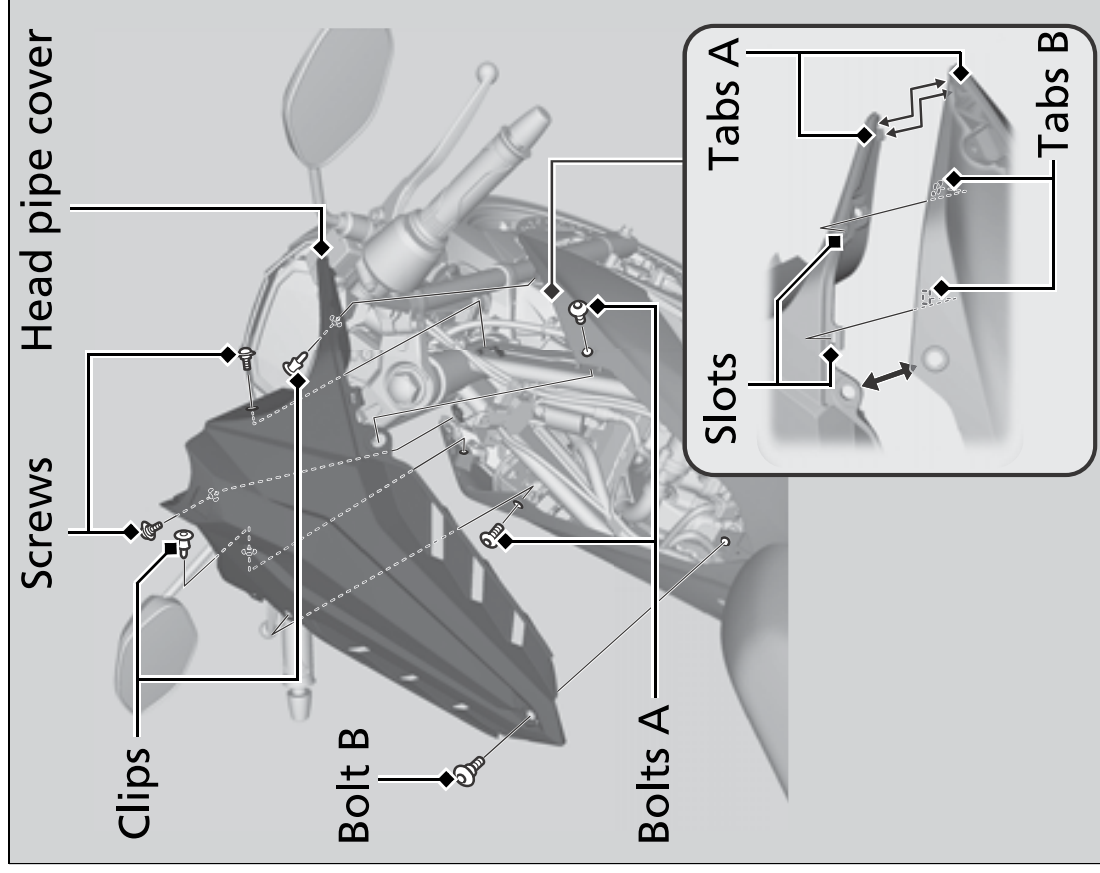

Removal

1. Remove the clips. ► P. 50
2. Remove the screws, bolts A and bolt B.
3. Release the tabs A and tabs B from the slots on both sides.
 - Carefully release the tabs.
4. Remove the head pipe cover.

Installation

Install the parts in the reverse order of removal.