

Troubleshooting

Engine Will Not Start	P. 77
Overheating (High coolant temperature indicator is on)	P. 78
Warning Indicators On or Flashing	P. 79
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 79
Other Warning Indication	P. 80
Fuel Gauge Failure Indication	P. 80
Tyre Puncture	P. 81
Electrical Trouble	P. 87
Battery Goes Dead	P. 87
Burned-out Light Bulb	P. 87
Blown Fuse	P. 92
Unstable Engine Running Occurs Sporadically	P. 93