


## Electrical Trouble ► Burned-out Light Bulb

3. Remove the bolts B, bolts C and headlight assembly.
  - Support the headlight assembly so that it does not hang by the wire harnesses.

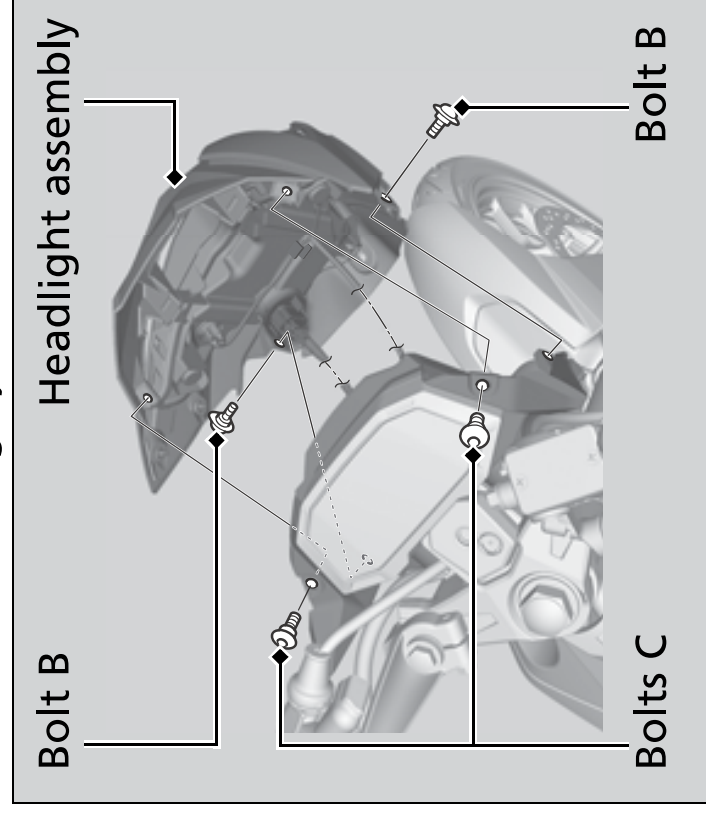

4. Turn the socket counterclockwise, then pull it out.
5. Pull out the bulb without turning.

6. Install a new bulb and parts in the reverse order of removal.
  - Install the socket by aligning its "△" mark with the round projection on the headlight case. Then turn it clockwise until the "△" mark is aligned with the triangular projection on the headlight case.
  - Use only the amber bulb.

