


Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on [page 154](#).

RIGHT SIDE

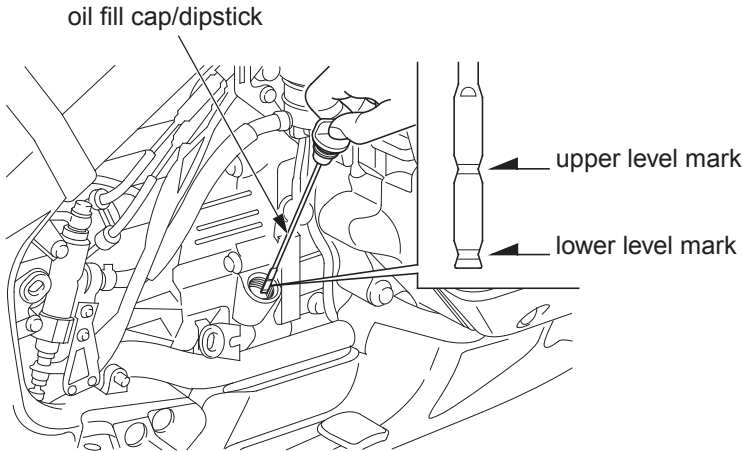

1. Park your motorcycle on its center stand on a firm, level surface.
2. Remove the right engine side cover ([page 168](#)).
3. Start the engine and let it idle for 3 – 5 minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.
4. Stop the engine and wait 2 – 3 minutes.
5. Remove the oil fill cap/dipstick and wipe it clean.
6. Insert the oil fill cap/dipstick until it seats, but don't screw it in.
7. Remove the oil fill cap/dipstick and check the oil level.
 - If the oil is at or near the upper level mark — you do not have to add oil.
 - If the oil is below or near the lower level mark — add the recommended oil until it reaches the upper level mark. (Do not overfill.)
8. Reinstall the oil fill cap/dipstick.
9. Reinstall the right engine side cover.
10. Check for oil leaks.