

## Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ↗ P. 30
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ↗ P. 30
- Make sure engine stop switch is in the  (Run) position. ↗ P. 26
- Check for a blown fuse. ↗ P. 91
- Check for a loose battery connection (↗ P. 56) or battery terminal corrosion (↗ P. 45).
- Check the condition of the battery. ↗ P. 88

If the problem continues, have your motorcycle inspected by your dealer.