

| Items                  | Frequency                  | Odometer Reading*1 |     |     |      |      |      |      |      | Regular Replace | Refer to page |
|------------------------|----------------------------|--------------------|-----|-----|------|------|------|------|------|-----------------|---------------|
|                        |                            | × 1,000 mi         | 0.6 | 4   | 8    | 12   | 16   | 20   | 24   |                 |               |
|                        |                            | × 1,000 km         | 1.0 | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | 38.4 |                 |               |
| Emission-Related Items | Fuel Line                  | 🔧                  |     |     | I    | I    | I    | I    | I    |                 | –             |
|                        | Throttle Operation         | 🔧                  |     |     | I    | I    | I    | I    | I    |                 | 81            |
|                        | Air Cleaner*2              |                    |     |     | R    |      | R    |      | R    |                 | 61, 73        |
|                        | Crankcase Breather*3       |                    |     |     | C    | C    | C    | C    | C    |                 | 82            |
|                        | Spark Plug                 |                    |     |     | I    | R    | I    | R    | I    | R               | 67            |
|                        | Valve Clearance            | 🔧                  |     |     | I    | I    | I    | I    | I    |                 | –             |
|                        | Engine Oil                 |                    |     | R   | R    | R    | R    | R    | R    |                 | 70            |
|                        | Engine Oil Strainer Screen |                    |     |     | C    |      | C    |      | C    |                 | 70            |
|                        | Engine Idle Speed          | 🔧                  |     | I   | I    | I    | I    | I    | I    |                 | –             |
|                        | Radiator Coolant*4         |                    |     |     | I    |      | I    |      | I    |                 | 3 Years       |
|                        | Cooling System             | 🔧                  |     |     | I    |      | I    |      | I    |                 | –             |

**Maintenance Level**

🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (☞ P. 113).

✗ : Technical. In the interest of safety, have your scooter serviced by your dealer.

**Maintenance Legend**

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

R : Replace

C : Clean