



After adjustment, confirm the freeplay of the brake lever.

NOTICE

Do not turn the adjuster beyond its natural limits.

Make sure the brake arm, spring and fastener are in good condition.