

Overheating	86
Oxygenated Fuels.....	112

P

Parking	11
Parts Location	18
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	24, 87
Protective Apparel.....	9

R

Rear Brake Lock.....	30
Recommended	
Coolant.....	56
Fuel.....	36
Oil	55
Refueling.....	36
Removal	
Battery.....	62
Battery Lid.....	63
Center Cover.....	64
Clip.....	65
Maintenance Cover	66
Repair Kit	89

Reporting Safety Defects (U.S.).....	117
Riding	34
Riding Precautions	10

S

Safety Labels	7
Safety Precautions.....	9
Seat	38
Shutter.....	29
Side Stand Ignition Cut-off System	31
Spark Plug	67
Specifications.....	118
Speedometer	20
Start Button.....	26
Starting the Engine	31
Steering Lock	28
Stopping Engine	99
Storage	
Center Compartment.....	39
Equipment	38
Fairing Pocket	41
Owner's Manual	40
Storing Your Scooter	103
Switches	26