

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	
			km	150	1000	
			MONTH	1	6	12
NOTE	HOURS		20	100	200	
REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)		100
* BRAKE FLUID	NOTE 3			1	1	118
* BRAKE SHOE WEAR	NOTE 1			1	1	130
* BRAKE LIGHT SWITCH			1	1	1	131
BRAKE SYSTEM			1	1	1	118
* REVERSE INHIBITOR SYSTEM			1	1	1	111
GUARDS				1	1	139
* CLUTCH SYSTEM			1	1	1	110
* SUSPENSION				1	1	—
* SPARK ARRESTER				C	C	117
* NUTS, BOLTS, FASTENERS			1		1	—
** WHEELS/TIRES			1	1	1	133
** TIE-ROD AND JOINT BOOTS			1	1	1	—
** STEERING SHAFT HOLDER BEARINGS					1	—
** STEERING SYSTEM					1	—

- * Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.