


# Controls & Features

## Start Button



### LEFT HANDLEBAR

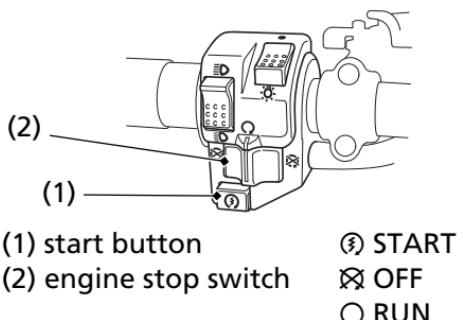

The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 48.

When the start button is pushed, the starter motor will crank the engine. The starter motor will operate even if the engine stop switch is in the OFF (☒) position when the start button is pushed.

## Engine Stop Switch



The engine stop switch (2) is used to stop the engine in an emergency. To operate, slide the switch to the OFF (☒) position. The switch must be in the RUN (○) position to start the engine, and it should normally remain in the RUN (○) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON (I) and the engine stop switch OFF (☒), the battery will discharge. Turn the ignition switch to OFF (O) to prevent battery discharge.