


Tank Cover Assembly Removal

Refer to *Safety Precautions* on [page 103](#).

The tank cover assembly must be removed for the engine oil filter, spark plug and clutch maintenance.

RIGHT SIDE

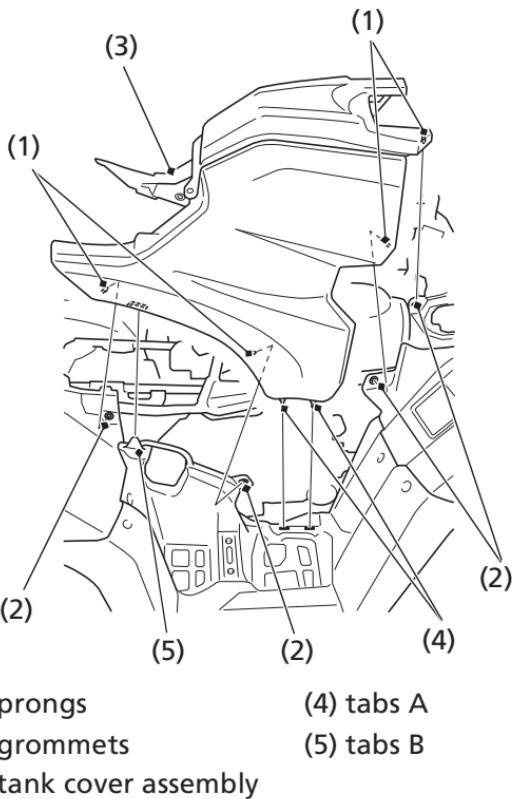

Removal

1. Remove the seat ([page 114](#)).
2. Remove the prongs (1) from the grommets (2).
3. Remove the tank cover assembly (3) by releasing the tabs A (4) and tabs B (5).