


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

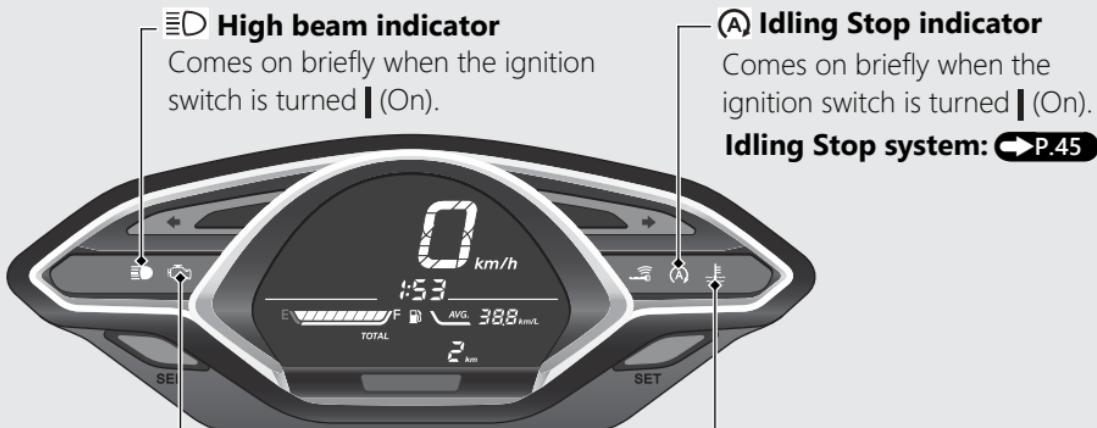

High beam indicator

Comes on briefly when the ignition switch is turned | (On).

Idling Stop indicator

Comes on briefly when the ignition switch is turned | (On).

Idling Stop system: ➔P.45

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned | (On).

If it comes on while engine is running:

➔P.102

High coolant temperature indicator

Comes on briefly when the ignition switch is turned | (On).

If it comes on while riding:

➔P.101