

Instruments (Continued)

2 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press **SET** switch, the backlight brightness indicator and backlight brightness adjustment segments stop flashing.
- 2 Press **SEL** switch. The brightness is switched.



- 3 Press **SET** switch. The backlight is set, and then the display moves to the changing of speed and mileage unit. (speed and mileage unit start flashing.)