

3 Changing of speed and mileage unit:

- 1 Press **SET** switch, the speed and mileage unit start flashing fast.
- 2 Press **SEL** switch to select either "km/h" and "km" or "mph" and "mile".

- 3 Press **SET** switch. The speed and mileage unit is set, and then the display moves to the changing of fuel mileage meter unit. (fuel mileage meter unit start flashing.)

