


## Battery Cover

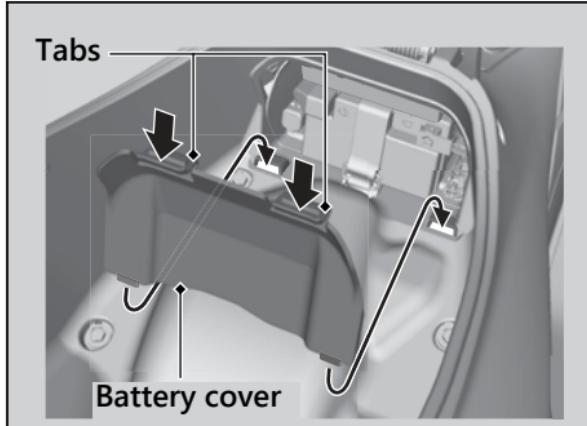

### ■ Removal

1. Open the seat. ▶ P. 44
2. Press the tabs and remove the battery cover.

### ■ Installation

Install the parts in the reverse order of removal.