


Rear Brake

Brakes are items of personal safety and should always be maintained in proper adjustment.

1. Raise the rear wheel off the ground by placing the support block under the motorcycle.
2. Rotate the rear wheel by hand and note distance the rear brake lever free play ② before the brake takes hold.

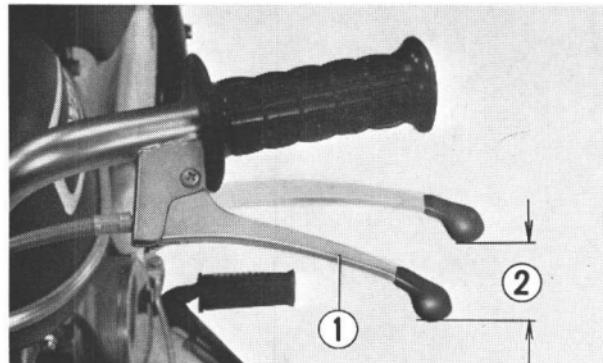

3. Nominal free play is **0.8~1.2 in. (20~30 mm)**.

If the adjustment is necessary, make the adjustment by turning the rear brake adjusting nut ③. Turn clockwise for less free play, counterclockwise for greater free play.

